

CYNCRA 3 GROUP INSTALLATION CHECKLIST





Quick Reference Specifications:

Dimensions: 21"(H) 43"(W) 23"(D)


Weight: 215 lbs (full)

Electrical Requirements: Volts: 208-240/Amps: 40

<u>Plumbing Requirements</u>: Flow: 30GPH (minimum) <u>Pressure</u>: 35psi (minimum) <u>Hardness</u>: 3 GPG (maximum) <u>Fitting</u>: 3/8" MPT w/shut-off <u>Drainage Requirements</u>: Open gravity drain of 1.25" ID (min) within 4

feet of machine.

The following information will assist you in preparing your location for the installation of your equipment. Please make sure everything is prepared to these specifications *prior* to scheduling your installation. Once everything is complete, check the appropriate boxes and sign the bottom of the form.

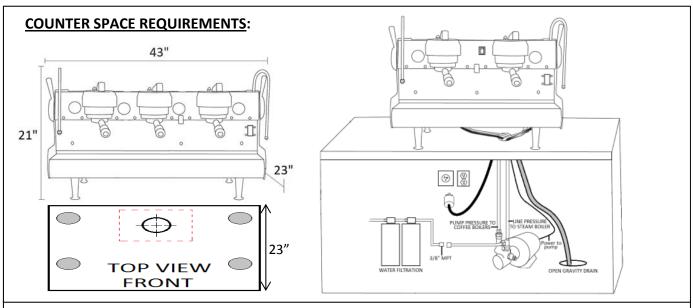

WATER SUPPLY REQUIREMENTS:

- *Machine must be supplied with a minimum of 30 Gallons per hour @ 35 PSI.
- *A 3/8" MPT is required for hook-up. A shut-off valve must be installed.
- *If water hardness levels exceed 3 GPG (Grains per Gallon) a water softener MUST be installed. Exceeding these levels will void the manufacturer's warranty. (Check appropriate box below)
- ☐ I have tested the water hardness and it is 3 GPG or less (see above).
- I already have a suitable water softener and its output is 3 GPG or less (see above).
- ☐ I have tested the water hardness level and it is written above. Please supply me with the appropriate water softener at time of installation.

ELECTRICAL REQUIREMENTS:

208-240V/40AMP/6700WATT

Dedicated 40 AMP Plug within 4 feet of installation location. PLEASE NOTE: The machine will not be supplied with a Cord Cap (Male plug).

DRAINAGE REQUIREMENTS:

Access to open gravity drain no smaller than 1.25" ID (Inner Diameter). Drain MUST be within 4 feet of the machine for proper drainage.